

# Corrosion Behavior of Zn/Graphene Composite in Aqueous Electrolyte System

Brindha R, Karthigai Selvii B, and Selvam M\*

*Centre for NanoScience and Technology, K S Rangasamy College of Technology, Tiruchengode, Tamil Nadu, India*

**\*Corresponding author:** Selvam M, Centre for NanoScience and Technology, K S Rangasamy College of Technology, Tiruchengode 637215, Tamil Nadu, India, Fax: +91.4288.274880, Tel: +91.4288.274880, E-mail: selvamic@gmail.com

**Citation:** Brindha R, Karthigai Selvii B, Selvam M (2018) Corrosion Behavior of Zn/Graphene Composite in Aqueous Electrolyte System. J Nanosci Nanotechnol 2: 303

**Article history:** Received: 01 February 2018, Accepted: 14 September 2018, Published: 17 September 2018

## Abstract

In the present study, the electrochemical corrosion behavior of zinc (Zn) and thin layer of graphene on Zn (ZnG) in different salt electrolyte such as NaCl, KCl and Na<sub>2</sub>SO<sub>4</sub> are report. The phase structure and Crystallinity is investigate using X-ray diffraction, Surface morphology and purity of the sample is investigate using Scanning Electron Microscopy and Energy dispersive X-ray analysis (SEM/EDAX) and Raman spectroscopy. The electrochemical corrosion behavior of the Zn and graphene coated on Zn are also investigated using Electrochemical Impedance Spectroscopy (EIS) analysis. The tafel slop and Nyquist plot confirms that ZnG shows better corrosion resistance and lower corrosion rate in KCl solution compare to all other electrolytes which is performed in Zn.

**Keywords:** Graphene; Electrochemical Techniques; Composite Materials; Corrosion Test; Surface Properties; Electron Microscopy

## Introduction

In the past years, steel materials find large applications and are used in various sectors because of its impressive mechanical strength. However, they have poor corrosion resistance, due to their thermodynamics instability when exposed to environment like high temperature, humidity and high pH [1]. Zinc is the 24<sup>th</sup> most abounded element in earth. The metal is hard and brittle at most temperature but become malleable between 100 to 150 °C. Zinc is worked to several applications such as, fair conductor of electricity, commonly used as a anti-corrosion agent, powder Zn is used in this way in alkaline batteries and sheets of Zn metal form the cases for and act as anodes in Zn-carbon batteries, Zn is used as the anode or fuel of the Zn-air battery fuel cell [2,3]. In this paper, electrochemical behavior of ZA-8 (Chemical composition of ZA-8 zinc alloy show in Table 1 anodized by the process will be focused. Zinc is more corrosion resistant when compared to steel in most natural atmospheres; the exceptions are ventilated indoor atmospheres where the corrosion rate of both steel and zinc is extremely low and certain highly corrosive in industrial atmospheres. Coatings of metallic zinc are usually regarded as the most economical means of protecting against corrosion. Seven methods of commonly applying a zinc coating to iron and steel that are in general use are stated: electro-galvanizing, zinc plating, mechanical plating, zinc spraying, hot dip galvanizing, continuous-line galvanizing and painting with zinc-bearing paints. But still Zn also gets corroded in the contaminated environment and the rate of corrosion of Zn can be decreased by making it as composite is what shown in this work.

Alloy	Zn	Al	Cu	Mg	Fe	Pb	Cd	Sn
ZA-8	Bal.	8.0-8.8	0.8-1.3	0.015-0.03	0.075	0.006	0.006	0.003

**Table 1:** Chemical composition (mass %) of ZA-8 zinc alloy

We are urgently in need of decreasing the corrosion rate and increasing the corrosion resistance. In the past, fullerene and exfoliated or intercalated clay metal have been used for anti-corrosion applications but those materials are highly insulating and also hygroscopic [4-6]. Hygroscopic materials act to suppress the anti-corrosion behavior of the coatings barrier properties. For coated metal substrates to be used in some applications such as fuel cells and solar cells. The coating needs to be electrically conductive as a fully insulating coating in unsuitable [7,8]. The alternative think is the newly developed nanoparticle is graphene. Graphene one of the carbon allotropes, two dimensional honeycomb lattice structure. It has unique characteristic properties, such as chemical inertness, thermal and chemical stability, and high surface area. Graphene that could have a significant impact on the

chemical, pharmaceutical and electronic industries [9]. Applied as paint, it can provide an ultra-strong, non corrosive coating for a wide range of applications in industries. Mechanical strength and impermeability to ion diffusion make it very strong candidate for corrosion to resistance and production coating as material [10].

Graphene one of the carbon allotropes, two dimensional honeycomb lattice structure. It has unique characteristic properties, such as chemical inertness, thermal and chemical stability, and high surface area. Graphene that could have a significant impact on the chemical, pharmaceutical and electronic industries [9]. Applied as paint, it can provide an ultra-strong, non corrosive coating for a wide range of applications in industries. Mechanical strength and impermeability to ion diffusion make it very strong candidate for corrosion to resistance and production coating as material [10].

Graphene is one of the best anti-corrosion materials. It is having very good hydrophilic nature. Impermeability of pure graphene, the coating acts as an excellent barrier to water, oxygen and other corrosion materials. When the corrosion starts at the metal/coating interface, electrons generated by the anodic reaction move through the metal to cathodic site, and complete the corrosion reaction [11-13]. This is the reason that, once the corrosion starts at the interface of the metal and a conventional insulating coating, it is difficult to stop. However, when functionalized graphene is incorporated in the coating, because of its excellent electrical conductivity an alternative path for the electron is provided, so that they may never reach a cathodic site. Moreover, graphene and graphene hybrid nanocomposites can be used inhibitors in protective coating to prevent oxidation of underlying metals in oxidizing chemicals, water or air for longer periods [14-17]. Graphene nanoparticles layer will block the diffusion of oxygen atoms with a relatively higher energy barrier. The oxygen molecule is weakly bound to bare graphene surface and when they get inactive, they can easily get dislocated into two oxygen atoms adsorbed to low coordinated carbon atoms of free vacancy at the edges. The oxidation behavior is reduced for these oxygen atoms and therefore the protection from oxidation provided by graphene coatings is weakened. Similarly plain Zn coating will have increased surface defects. Therefore, Zn – Graphene composite, will reduce surface defects, grain size and show better corrosion resistance property than plain zinc or graphene [18].

Graphene has synthesised by several methods such as exfoliation sol-gel chemical reduction ion-exchange and electrochemical method [19-23]. Most of the advantage present in the electrochemical method because naturally friendless, high qualitative and quantitative, control to applied the potential and recovery the using electrolyte. So, prepared the graphene by electrochemical method. The graphene is coated on zinc alloy using a doctor blade [19]. The corrosion studies of Zn / ZnG in three different electrolytes with different concentration (NaCl, Na<sub>2</sub>SO<sub>4</sub> and KCl) by Autolab workstation. The ZnG is more favorable for corrosion resistance than Zn in above electrolytes. In especially the ZnG is high corrosion resistance in KCl than NaCl and Na<sub>2</sub>SO<sub>4</sub>, as KCl is being a metal halide and the rate of reaction is less.

The structural, surface morphology and purity was investigated using X-ray diffraction, Scanning Electron Microscopy and Energy dispersive X-ray analysis (SEM/EDAX) measurements and Raman spectroscopy. The electrochemical behavior of the Zn and graphene coated on Zn were studied in terms of their linear sweep voltammograms and Electrochemical Impedance Spectroscopy (EIS) analysis. Aim of this work, is to show that ZnG has high corrosion resistance when compared with Zn.

## Experimental Procedure

### Synthesis of Graphene

Purified graphite rods were used as electrodes (6 mm, Aldrich 99.9%) and poly (Sodium diphenylamine sulphonate) (PSDS) (Himedia, 95%) was used as an electrolyte. The electrochemical exfoliation method was employed using potentiostatic (constant voltage) technique (Metrohm Autolab, PGSTAT 302N, The Netherlands) to synthesize high-purity graphene. First, 0.01 M PSDS electrolyte solution was prepared by dissolving the salt in to de-ionized (DI) water, then two graphite rods were inserted into a beaker filled with an electrolyte solution, with a separation distance of  $2 \pm 0.1$  cm [23]. A constant dc current potential of 6.2V was applied between two electrodes. During the electrolysis, the anode was corroded gradually to form a black precipitate in the beaker after 20 min. The exfoliation was continued for 4 h, and then the dispersion was taken from the electrolytic cell. The obtained dispersion was centrifuged (Remi, C-24 BL, India) at 10,000 rpm to remove the lighter particles. The supernatant was decanted and then, washed with de-ionized (DI) water and subsequently with ethanol and then finally dried at 353K for 24h to obtain graphene oxide powder. The obtained powder was reduced by hydrazine hydrate and dried in a hot air oven at 353K to obtain graphene sample [20]. This graphene sample was later composited with Zn alloy.

### Materials Characterization

The phase and crystalline nature of the prepared samples were analyzed by X-ray diffractometer (XRD) (X' Pert PRO, PANalytical, The Netherlands) using CuK $\alpha$  ( $\lambda = 1.5406 \text{ \AA}$ ) radiation source. The samples were scanned over the  $2\theta$  range of  $10^\circ$  to  $80^\circ$  at room temperature (298K). The observed peak positions and the relative intensities of the powder pattern were identified in comparison with the reference diffraction data. The surface morphology of graphene is examined under scanning electron microscopy coupled with energy dispersive X-ray analysis (SEM-EDAX) (JEOL JSM-6390LV, Japan) operating at 20 kV. The Raman spectra of the as-prepared graphene sample was obtained using a Raman spectrometer (Japan, WITech alpha300) confocal Raman systems equipped with an Nd:YAG laser ( $\lambda = 1064 \text{ nm}$ ). The Raman spectra were recorded with a frequency of 514nm as an excitation source using (RENISHAW M005-141, Japan) with a laser spot size of  $1 \mu\text{m}$ .

## Sample Preparation for Electrochemical Corrosion Studies

A zinc metal bar was used for the present study. The metal bar was cut into a small round specimen (1 cm<sup>2</sup>) and then subsequently polished with 9μm, 3μm, and 1μm silicon carbide grit papers and cleaned after each steps with acetone. The as-synthesized graphene powder was mixed with PVDF and *N*-Methyl-2-pyrrolidone at 80:15:5 weight ratio in order to prepare slurry. The slurry was further coated over the zinc specimen using the doctor blade technique [15]. The coating was repeated 3 times in order to achieve a uniform thickness of ~1μm of graphene on to the zinc metal surface. The coated zinc was dried in a hot air oven at 353K for 1h and then used for corrosion studies. Hereafter, the coated sample will be identified as ZnG.

## Electrochemical Measurements

The corrosion behavior of zinc metal was examined using a three electrode cell set-up. In this set-up, the zinc metal was used as a working electrode, while platinum and saturated calomel as counter and reference electrodes, respectively, for chloride based electrolyte. The salt bridge was used as a reference electrode for sulphate electrolyte. Electrochemical corrosion study was carried out (until the concurrent value was obtained) for both zinc and graphene coated zinc in different electrolytes using Autolab equipment (PGSTAT302N, Metrohm Autolab, and The Netherlands). The applied potential window for corrosion study was -1.8 to -1V at a scanning rate of 5 mV. Corrosion potential ( $V_{corr}$ ) and corrosion current ( $i_{corr}$ ) was determined from the extrapolated data of the cathodic and anodic parts of the potentiodynamic polarization test or Tafel plot. The impedance data for Zn and Zn/graphene was obtained within the frequency range of 0.01-100 kHz with AC amplitude of 5 mV. All the experiments were repeated three times in order to confirm the reproducibility of the results.

## Result and Discussion

### Microstructural Studies

Figure 1a Shows the observed peak in XRD pattern confirms the crystalline nature of the prepared graphene samples. A sharp intensive peak observed at 26.40° indicates existence graphene. However, the XRD pattern shows three peaks at  $2\theta$  value of 26.40, 44.28 and 54.35° for the planes (002), (101) and (004). Figure 1b shows the XRD pattern of Zn/graphene sample, the observed peak at 38.35° indicates presence of zinc. The XRD pattern shows two peaks at  $2\theta$  value of 38.35 and 42.62° for the planes (100) and (101). The observed results confirmed graphene is coated on Zn surface. Figure 2 shows the Raman spectra, the D, G, and 2D bands are clearly observed, respectively in 1347, 1569, and 2702 cm<sup>-1</sup> for the graphene samples. The above observation confirms the existence of a graphene layer. The SEM image reveals that sample have been ultrathin sheet morphology is shown in Figure 3. The EDAX intimate sample have been carbon and oxygen moreover S and Mn elements.

### Corrosion Studies

Comparative corrosion studies are carried out for both the Zn alloy and graphene coated zinc (Zn/graphene) samples in three different electrolytes namely NaCl, Na<sub>2</sub>SO<sub>4</sub> and KCl. First, the potential is applied at -1.4V and the corrosion is initiated at magnesium anode. Further, the potential tends to move toward 0.2V with an interval of ~5mVs<sup>-1</sup>. Figure 4a shows the potentiodynamic polarization curves or tafel plots for Zn and Zn/graphene samples in 3.5% NaCl electrolyte solution. The solid line indicates the corrosion behavior of Zn and the dotted line indicates the corrosion behavior of Zn/graphene in 3.5% NaCl electrolyte solution. It is observed that corrosion potential of Zn/graphene is shifted towards more positive (anodic region) value compared to Zn. The calculated corrosion current ( $i_{corr}$ ) tabulated in Table 2 was found ~7.52 × 10<sup>4</sup> Acm<sup>-2</sup> and ~2.82 × 10<sup>4</sup> Acm<sup>-2</sup> for Zn and Zn/graphene samples, respectively. The above results assured that low corrosion rate and high electrochemical corrosion resistance was achieved by a thin layer coating of graphene over the zinc anode surface.

Electrolyte	Sample	Corrosion Potential (vs. SCE.E.) V <sup>-1</sup>	Corrosion Current (Acm <sup>-2</sup> ) × 10 <sup>4</sup>
3.5 wt % NaCl	Zn	-1.259	7.52
	ZnG	-1.085	2.82
0.1M Na <sub>2</sub> SO <sub>4</sub>	Zn	-0.972	9.98
	ZnG	-0.873	7.43
0.1M KCl	Zn	-1.313	2.96
	ZnG	-1.076	1.84

**Table 2:** Corrosion potential ( $V_{corr}$ ) and corrosion current ( $i_{corr}$ ) determined from Tafel curves of 3.5 w% NaCl, 0.1M Na<sub>2</sub>SO<sub>4</sub> and 0.1 M KCl electrolyte

Figure 4b shows the corrosion curves for Zn and Zn/graphene in 0.1 M Na<sub>2</sub>SO<sub>4</sub> electrolyte. Similar corrosion trend was observed where the solid line indicates the corrosion behavior of zinc and the dotted line indicates the corrosion behavior of Zn/graphene in 0.1 M Na<sub>2</sub>SO<sub>4</sub> electrolyte and the observed corrosion current of Zn/graphene (~9.98 × 10<sup>4</sup> Acm<sup>-2</sup>) has lower value than Zn (~7.43 × 10<sup>4</sup> Acm<sup>-2</sup>).

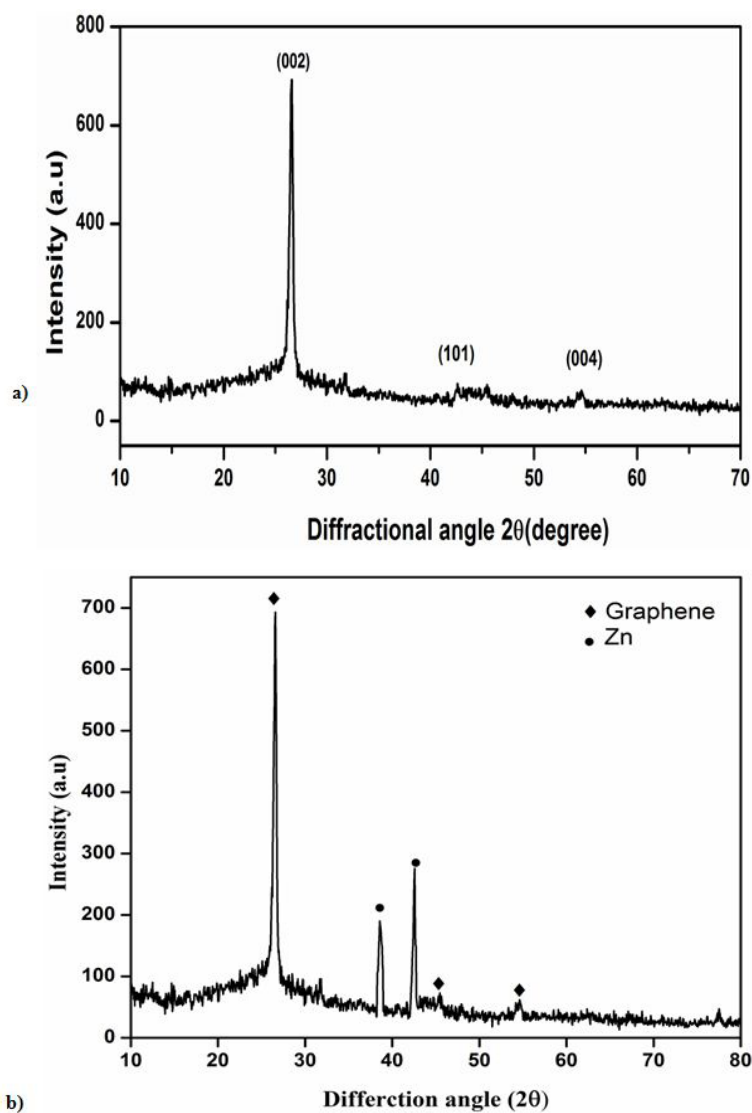


Figure 1: XRD pattern of a) as-prepared graphene and b) graphene coated Zn sample

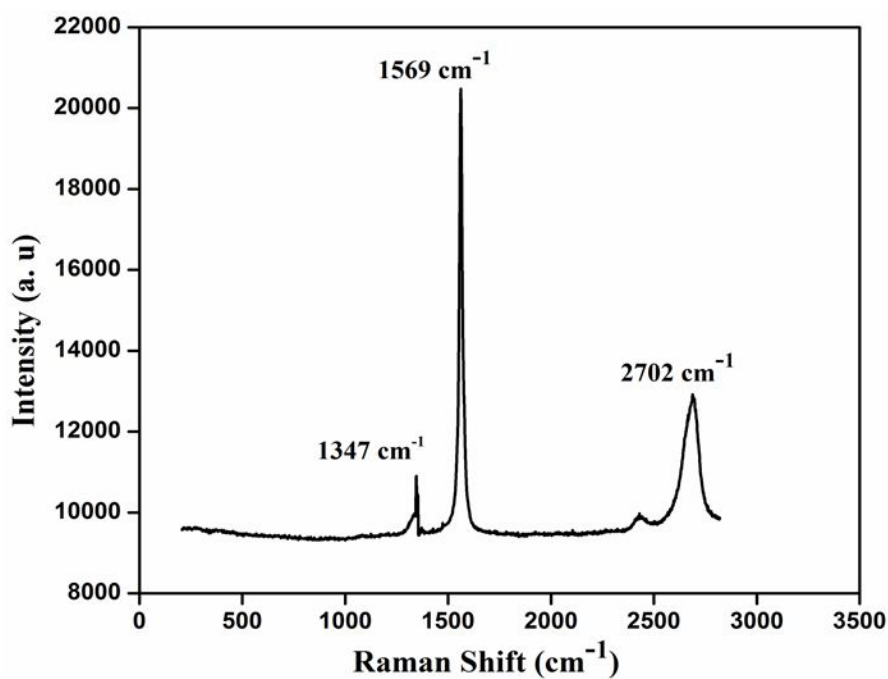


Figure 2: Raman spectrum of Graphene sample

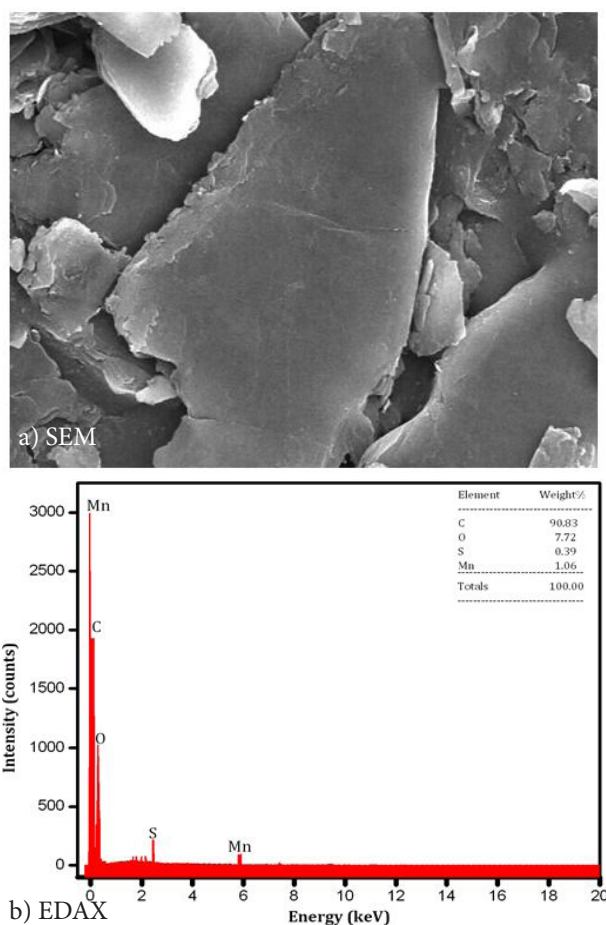


Figure 3: SEM and EDAX image of graphene

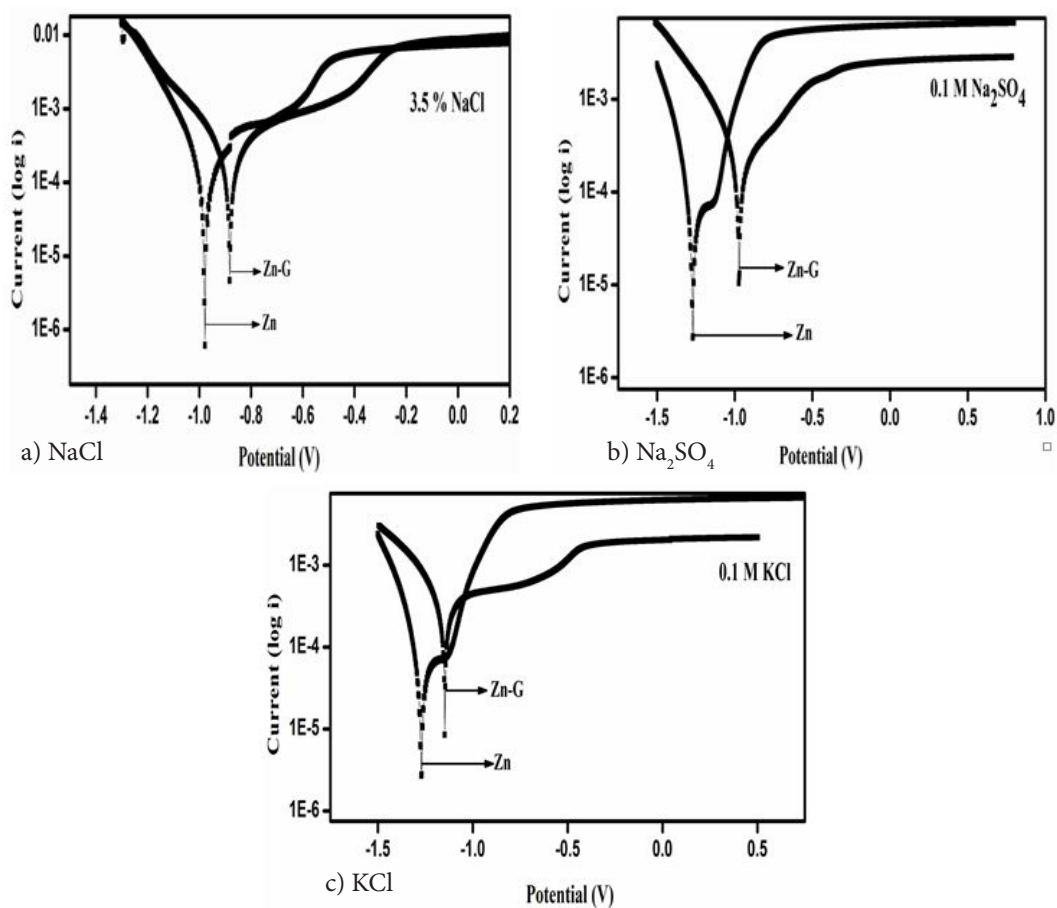


Figure 4: Current versus potential curves for Zn alloy and Zn/graphene sample in different electrolytes



The corrosion curves for Zn and Zn/graphene sample in 0.1 M KCl electrolyte was plotted in Figure 4c. It was also obvious that the Zn/graphene sample has lower corrosion current compared to Zn alloy sample suggests improve corrosion resistance achieved due to graphene coating over Zn surface. The Tafel slope is observed to be at low potential for Zn compared to Zn/graphene which also suggests a high corrosion rate. The calculated corrosion current ( $i_{corr}$ ) of the Zn and Zn/graphene samples was determined from the extrapolated lines of the Tafel curve (see Table 2) and found  $\sim 2.96 \times 10^{-4} \text{ Acm}^{-2}$  and  $\sim 1.84 \times 10^{-4} \text{ Acm}^{-2}$ , respectively. The above results testify that a thin layer coating of graphene over Zn surface is able to improve corrosion resistance in aqueous electrolytes. The polarization parameters measured from the potentiodynamic polarization curves or Tafel plots tabulated in Table 2 is also a testament that corrosion rate drastically drops when a thin layer coating of graphene is applied over the zinc surface. All the above studies were repeated multiple times, and found within the experimental error limits.

The SEM image provided additional information about the nature of the corrosion in Zn/ZnG (Figure 5). while the entire surface of the Zn metal alloy sample is damaged after exposure to positive potential in the electrolytes, in ZnG sample the surfaces degraded at isolate area, while leaving most of the sample surface undamaged (Figure 6). As graphene does not corrode on the potential window used in our experiment. We expect that these change occur at region of the Zn surface well covered by graphene. That is, high corrosion resistance have graphene coated Zn (ZnG).

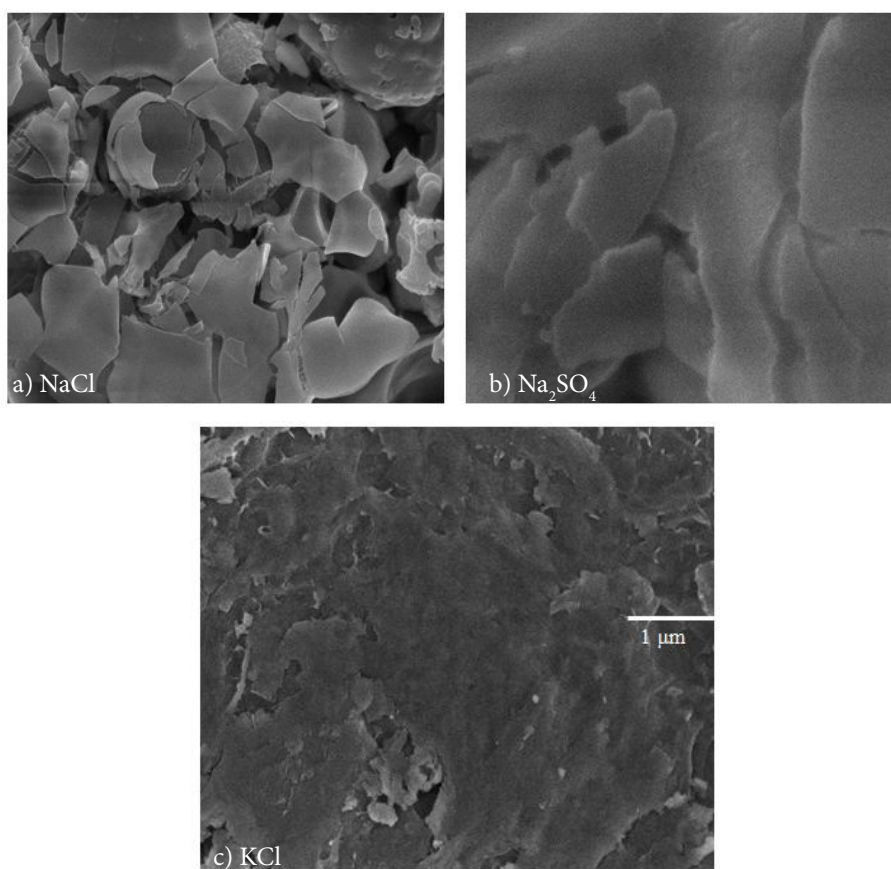
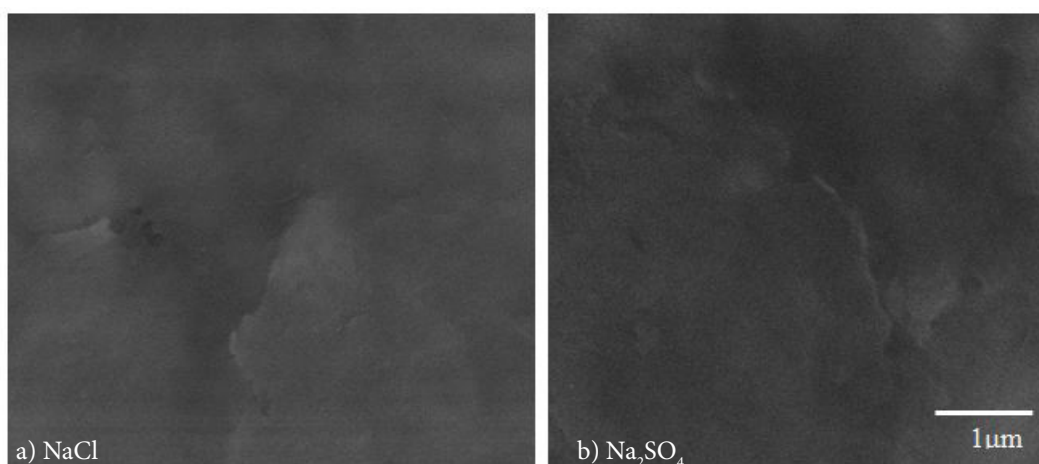


Figure 5: SEM image for Zn alloy sample in three different electrolytes



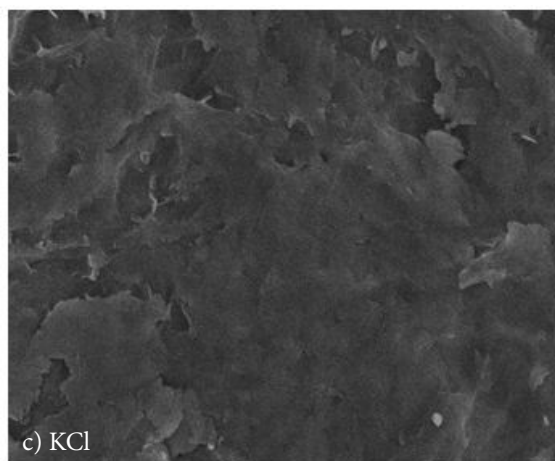
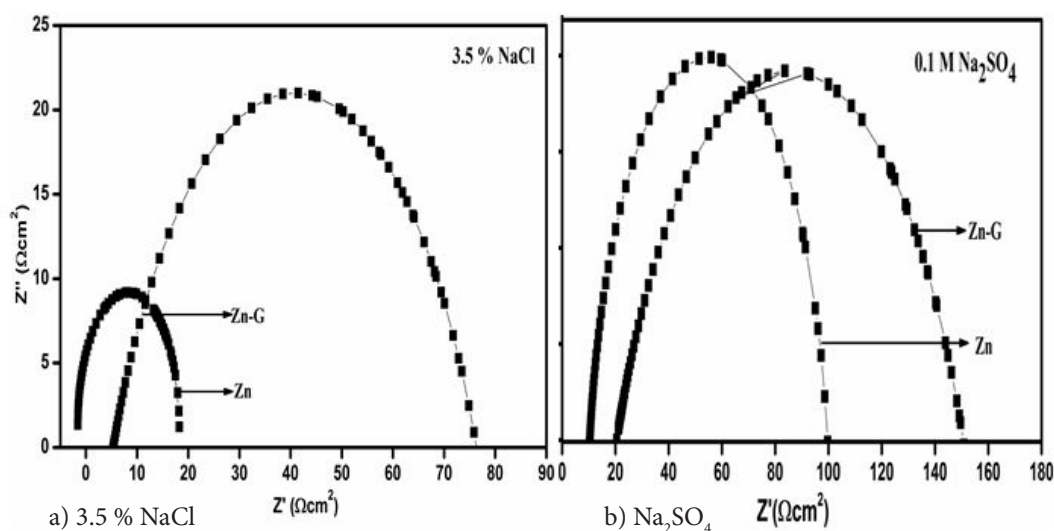




Figure 6: SEM image Zn/graphene samples in three different electrolytes

### Electrochemical Impedance Studies

The electrochemical impedance spectroscopy was used to study the corrosion mechanism of with and without coated Zn in three different electrolytes, such as NaCl, KCl and  $\text{Na}_2\text{SO}_4$ . Three different electrolytes, such as NaCl, KCl and  $\text{Na}_2\text{SO}_4$  is chosen since all the three of them has neutral salt behavior and are predominantly used now-a-days. Typical Nyquist plots Zn and ZnG in 3.5 % NaCl solution are shown in Figure 7a. The Nyquist plot shows that the curves for Zn and ZnG have a single capacitive loop in all frequencies [25]. Since, the corrosion rate is inversely proportional to  $R_{ct}$  value, the higher the  $R_{ct}$  value is, the lower the corrosion rate.  $R_{ct}$  value is nothing but, the radius of high frequency semicircle (coupling of  $R_{ct}$  and  $C_{dl}$ ). It is intersection with the x-axis at low frequencies.  $R_{ct}$  is the charge transfer resistance and it can be automatically calculated by using the command fit and simulation of equivalence circuit available in autolab (software NOVA 2.1). In other words,  $R_{ct}$  value is the difference between  $R_{coat}$  (coating resistance) and  $R_p$  (Polarization resistance). Figure 7b. The Nyquist plot shows that the curves for Zn and ZnG have a single capacitive loop in all frequencies. Since, the corrosion rate is inversely proportional to  $R_{ct}$  value, the higher the  $R_{ct}$  value is, the lower the corrosion rate. The Zn have less  $R_{ct}$  ( $100 \Omega\text{cm}^2$ ) value than graphene coated Zn ( $150 \Omega\text{cm}^2$ ), owing to Zn have low  $R_{ct}$  value and high corrosion rate than graphene coated on Zn in  $\text{Na}_2\text{SO}_4$  electrolyte. The Nyquist plot in Figure 7c shows that the curves for Zn and ZnG in 0.1M KCl solution have a single capacitive loop in all frequencies. The Nyquist plot reveals that charge-transfer resistance ( $R_{ct}$ ) of Zn in KCl, Zn have been lowest ( $R_{ct}$ ) value than ZnG. which one has higher ( $R_{ct}$ ) value and it also has higher corrosion resistance behavior. The Zn have less  $R_{ct}$  ( $200 \Omega\text{cm}^2$ ) value than graphene coated Zn ( $1550 \Omega\text{cm}^2$ ), owing to Zn have low  $R_{ct}$  value and high corrosion rate than graphene coated on Zn in KCl electrolyte. The Nyquist plot confirms that ZnG shows better corrosion resistance and lower corrosion rate in KCl solution compared to all other electrolytes which was performed in Zn. Comparing all the 3 electrolytes, metal halides (NaCl and KCl) have good corrosion resistance property than metal sulphates. Sulphates are more corrosive in nature and they react with Zn to form ZnS. Comparing with NaCl and KCl, both react with Zn to form ZnCl. Taking Na and K in to account, both react with graphene. But the rate of reaction is said to be less in K than Na. That's why KCl got favourable corrosion potential.



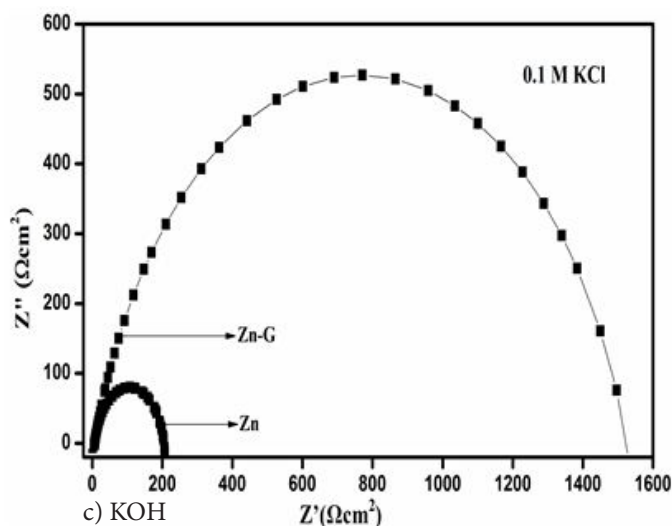


Figure 7: Nyquist plot for Zn alloy and Zn/graphene samples in different electrolyte

As solution contains equal number of  $H^+$  and  $OH^-$  ions, aqueous solution of potassium chloride is neutral in nature. Moreover, corrosion rate was evaluated based on the thickness of the corrosion product formed during one week of exposure to each of the salt. Both NaCl and KCl show strong corrosively. But when tested with ZnG KCl shows less reaction rate and said to have more corrosion resistance.

The equivalent circuit model of the impedance diagram is provided in Figure 8. Here,  $R_s$  represents the solution resistance between the alloy and counter electrode,  $Q_1$  and  $Q_2$  the constant phase element (CPEs),  $R_{p1}$  the resistance of a film layer formed on the Zn alloy surface and  $R_{p2}$  accounts for the polarisation resistance at the alloy surface.

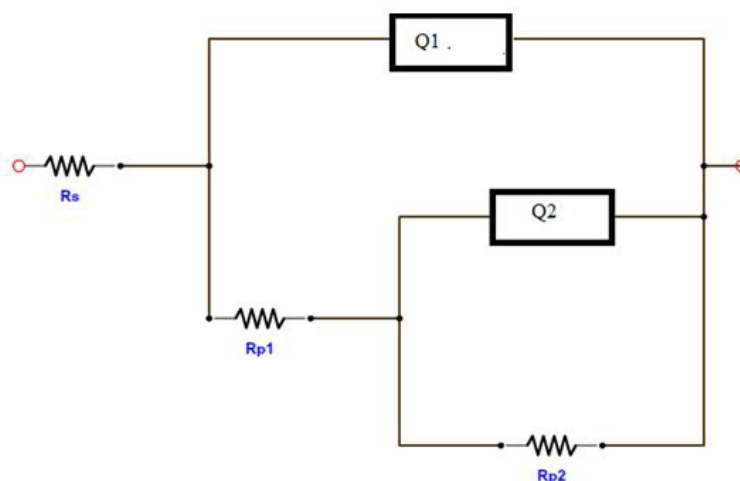


Figure 8: Equivalent circuit model of the impedance diagram

## Conclusion

In summary, thin layer graphene have been synthesized employing electrochemical method which is used to study the electrochemical properties in salt electrolytes such as NaCl, KCl and  $Na_2SO_4$ . The XRD have sharp and intensive peak at  $(2\theta)$   $26.34^\circ$  it is intimated to graphene. The observed peak at  $38.35^\circ$  indicates presence of zinc. Raman spectra of graphene peak corresponds to identified as D band at  $1347\text{ cm}^{-1}$ , G band at  $1569\text{ cm}^{-1}$  and 2D band at  $2702\text{ cm}^{-1}$ . The surface morphology of graphene sheets and Zn/ZnG was confirmed by SEM image; EADX has been confirmed the present of graphene as 90.83 %. The tafel plot reveals that the lower corrosion rate is achieved in ZnG than the Zn performed in KCl electrolytes. In addition, the Nyquist plot confirmed the ZnG exhibits better corrosion resistance in KCl electrolyte. The excellent corrosion resistance suggests that the ZnG has the potential to be used as an anode material for Zn battery system.

## Acknowledgement

One of the author Mr. M. Selvam is thankful to Department of Science and Technology (DST), New Delhi, for providing the INSPIRE fellowship (IF110749) to carry out this research work.

## References

1. Novoselov KS, Geim AK, Morozov SV, Jiang D, Zhang Y, et al. (2004) Electric field effect in atomically thin carbon films. Science 306: 666-9.
2. Sayanee M, Banerji P(2010) Hopping conduction in nitrogen doped ZnO in the temperature range 10–300 K. Appl Phys Lett 97: 263109.



3. Dennis RV, Viyannalage LT, Gaikwad AV, Rout TK, et al. (2013) Graphene nanocomposite coatings for protecting lowalloy steels from corrosion. *Am Ceram Soc Bull* 92: 18-24.
4. Lindstrom R, Svensson JE, Johansson LG (2000) *J Electrochem Soc* 147: 1751-7.
5. El-Mahdy GA, Nishikata A, Tsuru T (2000) AC impedance study on corrosion of 55% Al-Zn alloy-coated steel under thin electrolyte layers. *Corros Sci* 42: 1509-21.
6. Kirkland NT, Schiller T, Medhekar N, Biribilis N (2011) Exploring graphene as a corrosion protection barrier. *Corrosion Sci* 56: 1-4.
7. Zhang B, Zhou HB, Han EH, Ke W (2009) Effects of a small addition of Mn on the corrosion behaviour of Zn in a mixed solution. *Electrochim Acta* 54: 6598-608.
8. Chen S, Brown L, Levendorf M, Cai W, Ju SY, et al. (2012) *ACS Nano* 5: 1321-7.
9. Prasai D, Tuberquia JC, Harl RR, Jennings GK, Bolotin KI, et al. (2012) Graphene: corrosion-inhibiting coating. *ACS Nano* 6: 1102-8.
10. Xia X, Chen W, Zhaoa H, Xue B, Liao B, et al. (2014) *Corros Sci* 80: 247-56.
11. Tong Y, Bohm S, Song M, Austin J (2014) Carbon based coating on steel with improved electrical conductivity. *Nanomed Nanotechnol* 1: 16.
12. Nishikata A, Ichihara Y, Tsuru T (1996) Electrochemical impedance spectroscopy of metals covered with a thin electrolyte layer. *Electrochim Acta* 41: 1057-62.
13. Cheng YL, Zhang Z, Cao FH, Li JF, Zhang JQ, et al. (2004) A study of the corrosion of aluminum alloy 2024-T3 under thin electrolyte layers. *Corros Sci* 46: 1649-67.
14. Richard Prabakar SJ, Hwang YH, Bae EG, Lee DK, Pyo M (2013) Graphene oxide as a corrosion inhibitor for the aluminum current collector in lithium ion batteries. *Carbon* 52: 128-36.
15. Xing S, Li Y, Wu J, Yan Y (2010) Electrochemical methods study on corrosion of 5% Al-Zn alloy-coated steel under thin electrolyte layers. *Mater Corros* 61: 428.
16. An BG, Zhang XY, Han EH, Li HX (2004) A Review *Acta Metall Sin* 40: 202.
17. Selvam M, Srither SR, Saminathan K, Rajendran V (2014) Electrochemically and chemically prepared graphene / MnO<sub>2</sub> nano- composite electrodes for Zinc primary cells: A comparative study. *J ionics* 9: 1622-5.
18. Chen YY, Chung SC, Shih HC (2006) Studies on the initial stages of zinc atmospheric corrosion in the presence of chloride. *Corros Sci* 48: 3547-64.
19. Gayathiri S, Jayabal P, Kottaisamy M, Ramakrishnan V (2014) Synthesis of few layer graphene by direct exfoliation of graphite and a Raman spectroscopic study. *AIP Adv* 4: 116.
20. Matthew BL, Matthew H, Sandeep M, Adam S (2015) *Carbon* 95: 616-24.
21. Thakur A, kumar S, Rangra VS (2015) *Res Gate AIP* 1661: 527.
22. Rangreez TA, Inammudin, Abdulla MA, Basma GA, Naushad M (2017) Synthesis and Ion-Exchange Properties of Graphene Th(IV) Phosphate Composite Cation Exchanger: Its Applications in the Selective Separation of Lead Metal Ions. *Environ Res Pub Health* 14: 828.
23. Assaf FH, Abd El-Rehiem SS, Zaky AM (1999) *Mater Chem Phys* 58: 58-63.
24. Rosalbino F, Angelini E, Maccipio D, Saccone A, Deleno S (2007) *Electrochim. Acta*, 52: 7107-14.
25. Rosalbino F, Angelini E, Maccipio D, Saccone A, Deleno S (2009) *Electrochim Acta* 54: 1204-9.